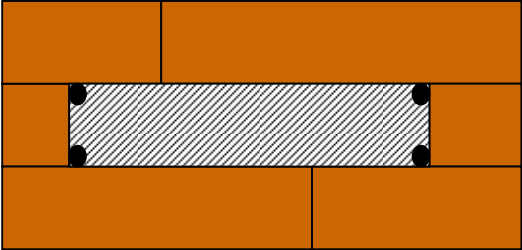
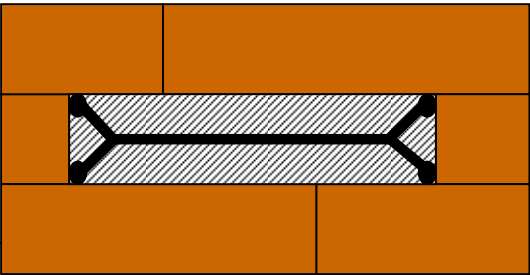
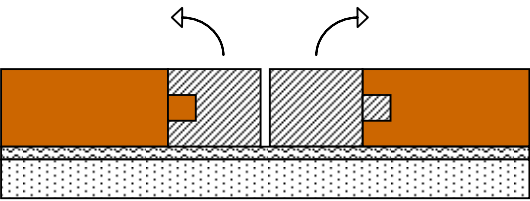
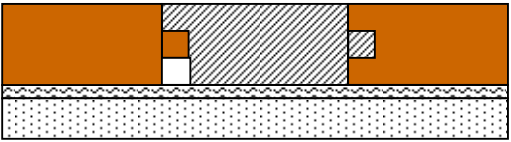


## STICK REPAIR

For the laminated flooring to carry out the replacement of stick while following the following instructions and the corresponding drawing.

|   |  |
|---|--|
| <p><b>Stage 1</b><br/>Bore with the four corners of the damaged stick, a hole of diameter 16 using a wick with tracing point.</p>   |    |
| <p><b>Stage 2</b><br/>Incise using a circular saw, the thickness of the panel while following the layout connecting the four holes as indicated on the drawing. Release definitively the 4 elements by a chisel to the level of drillings.</p>  |   |
| <p><b>Stage 3</b><br/>Each element will be withdrawn with precaution by raising it gradually upwards using a foot of hind and by breaking by with blow the joint. After the withdrawal of the 4 elements, to clean the assemblies using a mini plane to eliminate very possible defect.</p> |  |
| <p><b>Stage 4</b><br/>The new stick to be inserted will be prepared by withdrawing the bottom of the rainures. The fitting will be checked before definitively reassembling the new stick by sticking it. The stick will be charged during all the time with drying of the adhesive.</p>    |  |

**Notice :**

It is preferable to carry out the disassembling of the sticks until the site of the defective stick to eliminate and to reposition them at once.